

EXTRA OPTIONAL SEALS FOR FOX FLOAT BOOST VALVE SHOCKS

INSTALLATION NOTES:
CLEAN OUT BOOST VALVE TOTALLY
ONLY MINIMAL GREASE ON THESE SEALS
ENSURE VALVE OPERATES BY HAND BEFORE REINSTALLING
BOOST VALVE OPERATES ON INTERNAL SHOCK PRESSURE
- CHANGING IFP PRESSURE CHANGES BOOST VALVE EFFECT

